



4006

24 HOURS SHARP

- Ergonomic side edge sharpener
- Pocket size, «on the slope» use also
- Easy handling, steady grip, maximum accuracy
- Best results, minimum effort
- Right and left hand use
- For ski and snowboard



STEP 1 **DIAMOND COARSE:**
to remove rock damaged spots and burrs.
Best if used with water or with a polishing solution.
(Spare part **5170**)



STEP 2 **DIAMOND FINE:**
to polish and super finish the ski and snowboard edges.
Best if used with water or with a polishing solution.
(Spare part **5180**)

